

Shipment and Delivery

Shipping Information and Customer Responsibility

Shipment to the customer will be arranged by a Stratasys distributor as indicated in the “ship to” part of the invoice. The customer is responsible for providing detailed delivery information, including, whether or not there is loading dock at the delivery site.

The customer is responsible for transporting the printer to a suitable installation site, and for unloading, unpacking, and moving it to its final location. Upon request, your Stratasys service provider will advise regarding these matters.



Note:
Only Stratasys-certified Customer Support Engineers are authorized to unpack and install equipment.

Shipping Pallet

The following table shows the approximate size and weight of the printing system mounted on a pallet.

Table 2 Size and weight of printer on shipping pallet

	W × H × D (cm)	W × H × D (inch)	Weight (kg/lb)
Printer	161 × 159 × 161	63.4 × 62.6 × 63.4	750 / 1654
Materials cabinet	109 × 139 × 94	42.7 × 54.7 × 37	300 / 661



W = Width; H = Height; D = Depth

Lifting Equipment

A forklift or hand-operated pallet truck with the following specifications is required:

- lifting capacity: 800 kg (1650 lb)
- extension: 150 cm (60 in.)

Unloading

The unloading area should be a level surface.


An area of 10 m² (108 sq ft) is required for the forklift to remove the printer from the delivery truck.

A clearance of 120 cm (4 ft) around the back and sides of the packaging is required for unpacking the printer.

A clearance of 390 cm (13 ft) from the front is required for unloading the printer from the pallet.

The installation location must be accessible from the unloading area. The customer is responsible for unloading the printer from the truck and transferring it to the installation location. Minimum space requirements for unloading the printer are shown in the figure below.

Figure 2 Unloading dimensions—top view

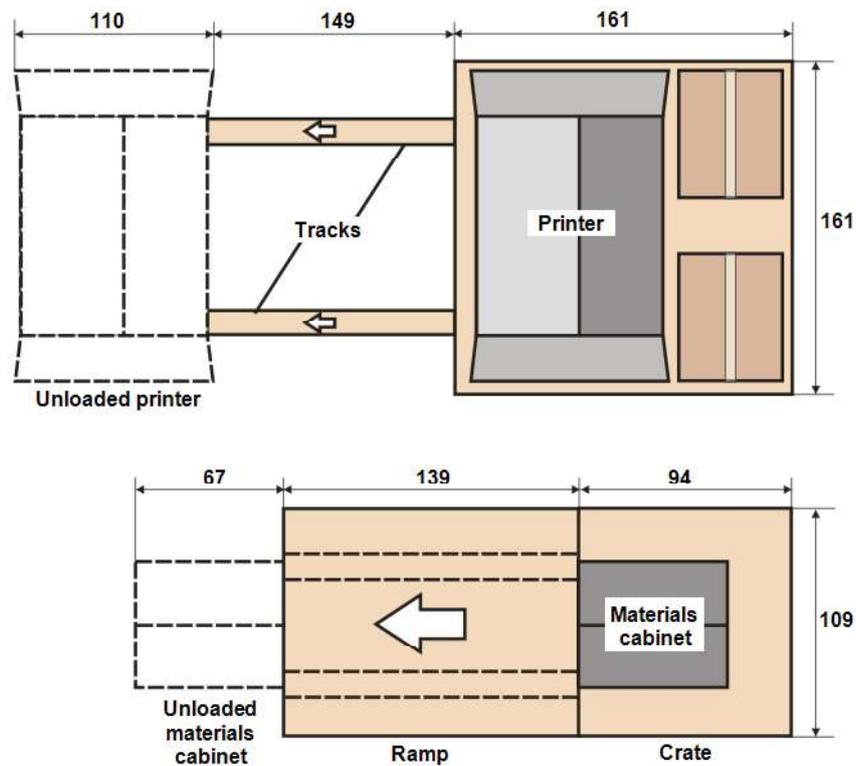

Note:

Dimensions are shown in centimeters.